

# ACTIVESHOP<sup>®</sup>

## INSTRUCTIONS FOR USE

iWax 2-in-1 Wax Heater 400ml+ 800ml 400W



### Importer:


ACTIVESHOP Sp. z o.o.  
Ul. Graniczna 8b, building  
DC2A 54-610 Wrocław,  
Poland  
[www.activeshop.com.pl](http://www.activeshop.com.pl)  
Rev. A/01/2025



### Technical data:

Power	400W
Voltage	220-240V,50Hz
Temperature control	45°C-105°C
Dimensions	36 x 18 x 13cm

### Construction:

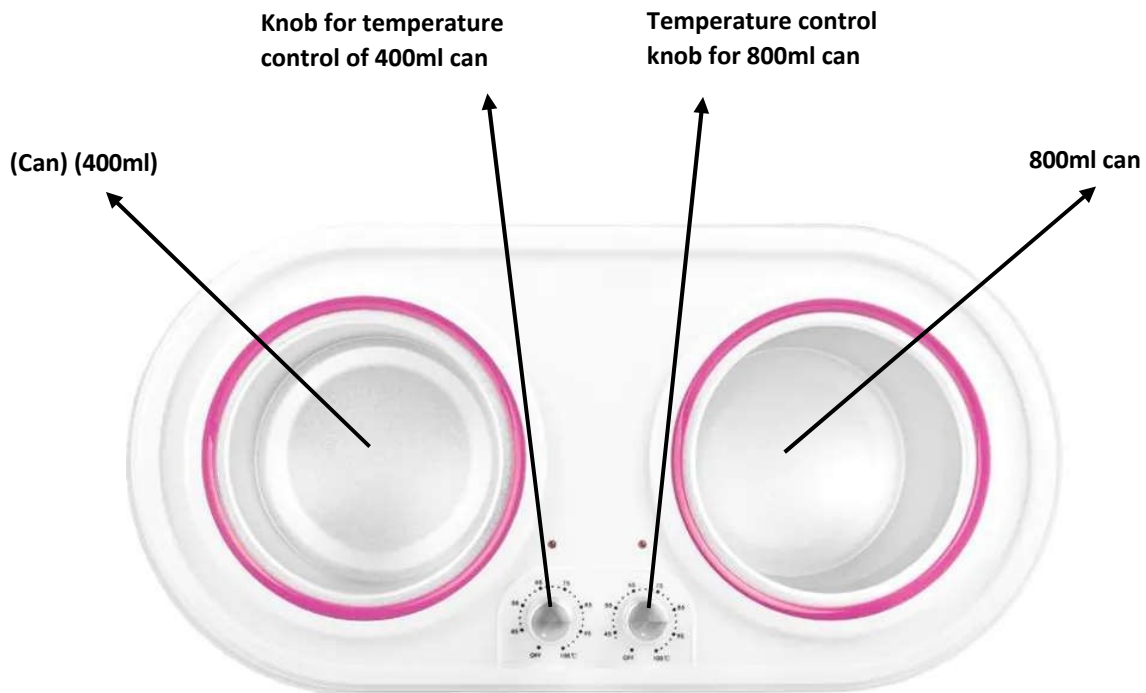

### Usage:

1. Place the wax in the heater and put the lid on.
2. Plug in the device and set the desired temperature with the appropriate knob.
3. When the wax melts, turn off the heater with the knob and then unplug.
4. Before applying the wax to the skin, make sure the wax is not too hot to avoid burning.
5. Clean your skin before epilating, your skin should be dry and clean.
6. Apply the wax with a stick to the skin along the direction of the hair.
7. Then stick the depilatory paper on the wax-covered skin.
8. Tear off the depilatory paper onto the wax-covered skin.
9. After the epilation is done, reverse the direction of the hair in a firm motion.
10. Make sure the device is turned off and unplugged.

### **Cleaning the device:**

1. Do not use solvents or strong cleaning agents.
2. Always unplug the device before cleaning.
3. Do not soak the device in water.
4. Do not use sharp objects for cleaning.
5. You can use a special liquid to remove wax residue

### **Included in the set:**

1. Power cord.
2. Heater base.
3. Handle.
4. Cover.

### **SAFETY PRECAUTIONS**

1. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP Ltd. company).
2. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
3. Immediately unplug the unit from the outlet and contact the authorized service provided by ACTIVESHOP Sp. z o.o. in the following cases:  
(a) Liquid has gotten into the device, (b) the device emits a strange odor, smoke or makes strange sounds, (c) the power cord has been damaged, (d) the device has been knocked over or its housing has been damaged.
4. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
5. For safety purposes, remove the power cord from the outlet each time you finish working with the device.
6. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
7. Do not place the device on an unstable cart or vehicle. The device may be damaged if it falls.
8. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button a second time (between switching on and off).
9. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device, damage or even burning.

## CAUTION!

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years old and by people with reduced physical and mental capabilities and people with inexperience and lack of familiarity with the equipment, if supervision or instruction on the use of the equipment in a safe manner is provided, so that the associated risks are understood.
3. The device is not intended for play by children. Do not allow children to play with the device.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge in the use of the appliance are near it.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk, or lead to death, so keep it out of the reach of children.

## DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment

used electrical and electronic equipment should be collected separately, and then handed over to collection centers for used electronic and electrical equipment. At the end of their useful life, as well as old appliances containing full-value recyclable components, so they should be sent for reprocessing, Therefore, they should be handed over to the appropriate collection points, as well as they can be handed over to ACTIVESHOP Ltd.

## STORAGE AND TRANSPORT

The device should be transported at a temperature range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated place and a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During the storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.