

ACTIVESHOP®

USER MANUAL

iWax 100W wax heater



Importer:

ACTIVESHOP Sp. z o.o.

Ul. Graniczna 8b, bud.

DC2A 54-610 Wrocław,

Poland

www.activeshop.com.pl


Rev. A/01/2025



Technical data:

Power	100W
Voltage	220-240V, 50Hz
Capacity	500ml
Temperature control	35°C-125°C
Time settings	1 min-99 min
Dimensions	20.2 x 20.2 x 18.8 cm

Construction:

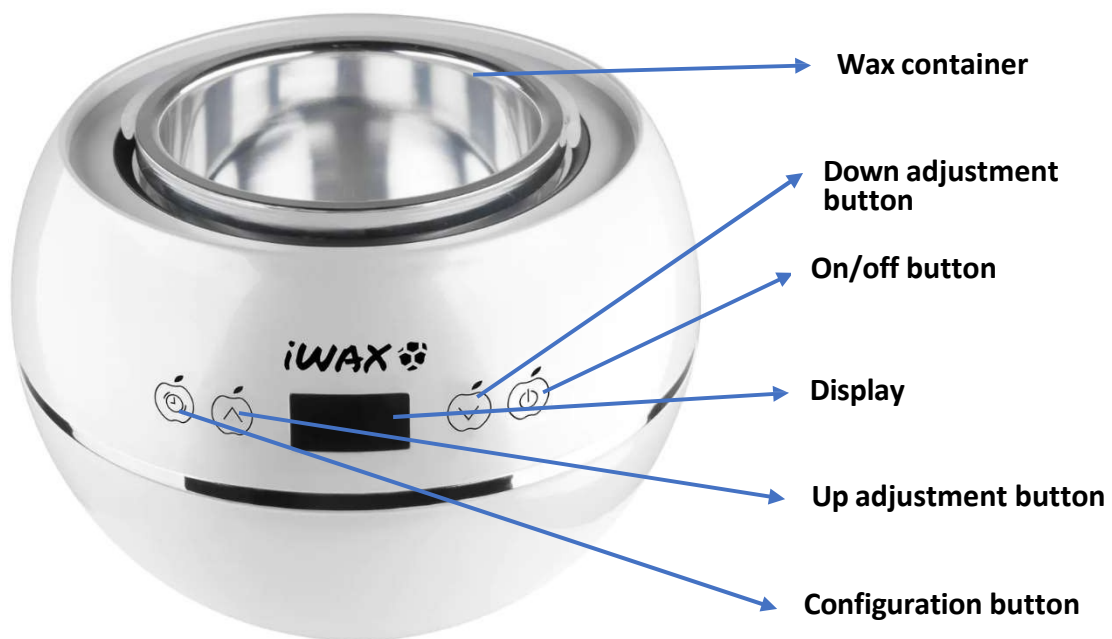

Device operation:

- **Turning on/off** Press the "on/off" to start the device, you will hear a short beep sound. Press the "on/off" button turn off the device. you will hear 3 beeps.
- **Setting the temperature** - Press the "up" button to increase the temperature or press the "down" button to decrease the temperature. After 1 second, the display will appear the current heater of the heater will appear on the display.
- **Changing the operating time** - Press the configuration button, "h30" will appear, meaning 30 minutes. Then use the "up" and "down" buttons to set the desired operating time in minutes and confirm with the configuration button. **Note:** During time mode, the default operating temperature is 70°C!
- **Changing the unit** - Hold down the configuration button to change the temperature unit from °C to °F.

Usage:

1. Place the wax can in the heater and put the lid on.
2. Connect the device to the power supply and set the selected temperature. (NOTE! The maximum temperature can only be set to heat the wax. Once the wax is semi-liquid, change the temperature to that recommended by the wax manufacturer).
3. When the wax has melted, turn off the heater using the "on/off" button and then unplug it.
4. Before applying the wax to the skin, make sure it is not too hot to avoid burns.
5. Clean the skin before waxing; the skin should be dry and clean.
6. Apply the wax to the skin with a stick in the direction of hair growth.
7. Then stick the waxing strip onto the wax-covered skin.
8. Pull the wax strip off with a firm motion in the opposite direction of hair growth.
9. After waxing, apply an after-wax oil or lotion to soothe irritation and redness, remove wax residue, and moisturize the skin.
10. Make sure that the device is turned off and disconnected from the power supply.

Cleaning the device:

1. Do not use solvents or strong cleaning agents.
2. Always unplug the device before cleaning.
3. Do not immerse the device in water.
4. Do not use sharp objects for cleaning.
5. You can use a special liquid to remove wax residue.

The set includes:

1. Power cord.
2. Heater base.
3. Wax container with handle
4. Lid

SAFETY PRECAUTIONS

1. Do not disassemble the device or attempt to use it for purposes other than those specified in this user manual. All service and repair work must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).
2. Do not install or operate the device near liquids, wet areas, or with wet hands – so that no liquids can get into the device.
3. Immediately unplug the device and contact an authorized service center provided by ACTIVESHOP Sp. z o.o. in the following cases:
 - a) Liquid has entered the device, b) the device emits a strange odor, smoke, or strange noises, c) the power cord has been damaged, d) the device has been knocked over or its casing has been damaged.
4. Do not place any objects on the cables. Do not install the device in places where someone could step on the power cord.
5. For safety reasons, unplug the power cord from the outlet each time you finish using the device.
6. Do not insert anything into the opening in the device. If a foreign object gets into the opening, unplug the cord from the outlet and contact your distributor or manufacturer.

7. Do not place the device on an unstable cart, shelf, or vehicle. The device may be damaged if it falls.
8. To ensure the specified service life of the device, it is recommended to wait one minute before pressing the power button again (between turning it on and off and vice versa).
9. The power supply must comply with the specifications on the rating plate. Otherwise, there is a risk of malfunction, damage, or even burning of the device.

CAUTION!

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center to avoid danger.
2. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way so that the hazards are understood.
3. The device is not intended for use by children. Children must not be allowed to play with the device.
4. Do not leave the device unattended when children or persons who do not have sufficient knowledge of how to use the device are in its vicinity.
5. This electrical appliance is not a toy. Incorrect use or contact with the electrical appliance may pose a risk to health or lead to death, so keep it out of the reach of children.

DISPOSAL OF THE DEVICE



Used electrical appliances, equipment, and packaging should be taken to recycling centers in accordance with environmental protection regulations. Electrical appliances should not be disposed of in household waste containers. Follow the rules in accordance with equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, used electrical equipment must be collected separately and then transferred to collection points for waste electrical and electronic equipment. At the end of their useful life, old devices contain valuable recyclable components and should therefore be sent for recycling. They should be taken to appropriate collection points, or they can be sent to **ACTIVESHOP Sp. z o.o.**

STORAGE AND TRANSPORT

The device should be transported at a temperature between (–) 20 °C and (+) 50 °C, exclusively in its original packaging. The device should be stored in a well-ventilated place with a relative humidity of no more than 75%. Operating temperature range: (+) 10 °C to (+) 40 °C. During storage and transport, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric factors.